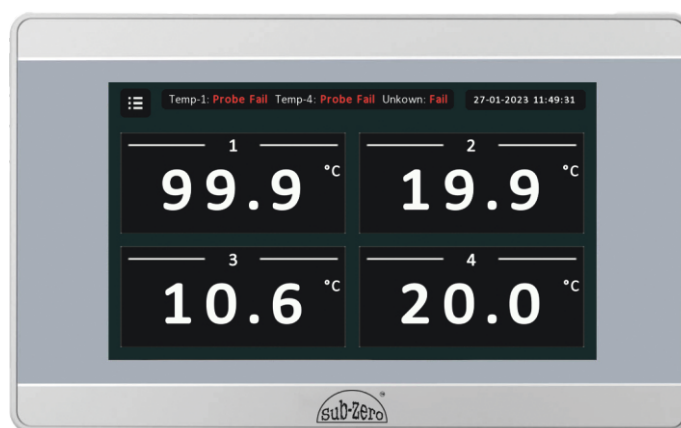




Main Features

- ABS enclosure, low cost, high reliability.
- The main board is treated with a special coating (three anti-paint) to adapt to harsh environment.
- High resolution, high brightness, LED backlight, more energy saving and environmental protection.
- The USB host port supports U disk to storage and download data.
- 2-way serial port, more powerful expansion function.
- New configuration software, rich library, powerful features.

Specification

Display	: 4.3" 16:9 TFT LCD
Resolution (WxH)	: 800X480
Colors	: 16-bit
Brightness	: 250 cd/m ²
Backlight	: LED
LCD Life	: 50000 hours
Touch Panel	: 4 wires resistive touch screen
CPU	: 600MHz ARM Cortex-A8
Memory	: 64M Flash + 128M DDR3
RTC	: Built in
Ethernet	: N/A
USB Port	: USB Slave 2.0 Port*1, USB Host 2.0 Port*1
Download Port	: USB Slave Port/U-disk
COM Port	: COM1:RS232/RS485/RS422 COM3:RS232
LCD Viewing Angle (T/B/L/R)	: 50°/70°/70°/70°

Electrical Specification :

Power Consumption	: < 5W
Input Power	: DC24V,working range DC 9V~28V
Power Protection	: Protected from thunder strike and surging
Power Down Allowed	: < 5mS
CE & RoHS	: Complied with EN61000-6-2:2005, EN61000-6-4:2007, RoHS, Surge Immunity:± 1KV, EFT:± 2KV,ESD:4KV, Air:8KV

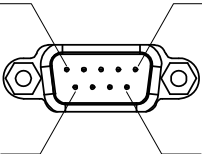
Environment Specification :


Operating Temperature	: 0~50°C
Storage Temperature	: -20~60°C
Anti-UV	: Not suitable to work in strong ultraviolet light (such as direct sunlight)
Operating Humidity	: 10~90%RH(Non condensation)
Vibration Endurance	: 10~25Hz(X,Y,Z direction 2G/30 minutes)
Cooling	: Natural air cooling

Mechanical Specification :

Degree of protection	: Front IP65(with NEMA panel), Back IP20
Enclosure	: Engineering plastic
Panel Cutout (WxH)	: 132mm×80mm
Dimension	: 138mm×86mm×32mm
Weight	: About 300g

Wiring Definition

Power Terminal (Pin1 ~Pin3 from left to right)		
	Pin1	FG
	Pin2	0V
DB9 Serial Terminal (Pin1 ~Pin9 from left to right)		
	Pin1	Rx-(B)
	Pin2	RxD (COM1 RS232)
	Pin3	TxD (COM1 RS232)
	Pin4	Tx- (COM1 RS422)
	Pin5	GND
	Pin6	Rx + (A)
	Pin7	RxD (COM3 RS232)
	Pin8	TxD (COM3 RS232)
	Pin9	Tx+ (COM1 RS422)

USB Host		
	USB Type C	Used to connect U disk, scan code gun and other peripherals
USB Slave		
	Micro USB	Used to download programs and debug

Dimensions & Panel Cutout

